


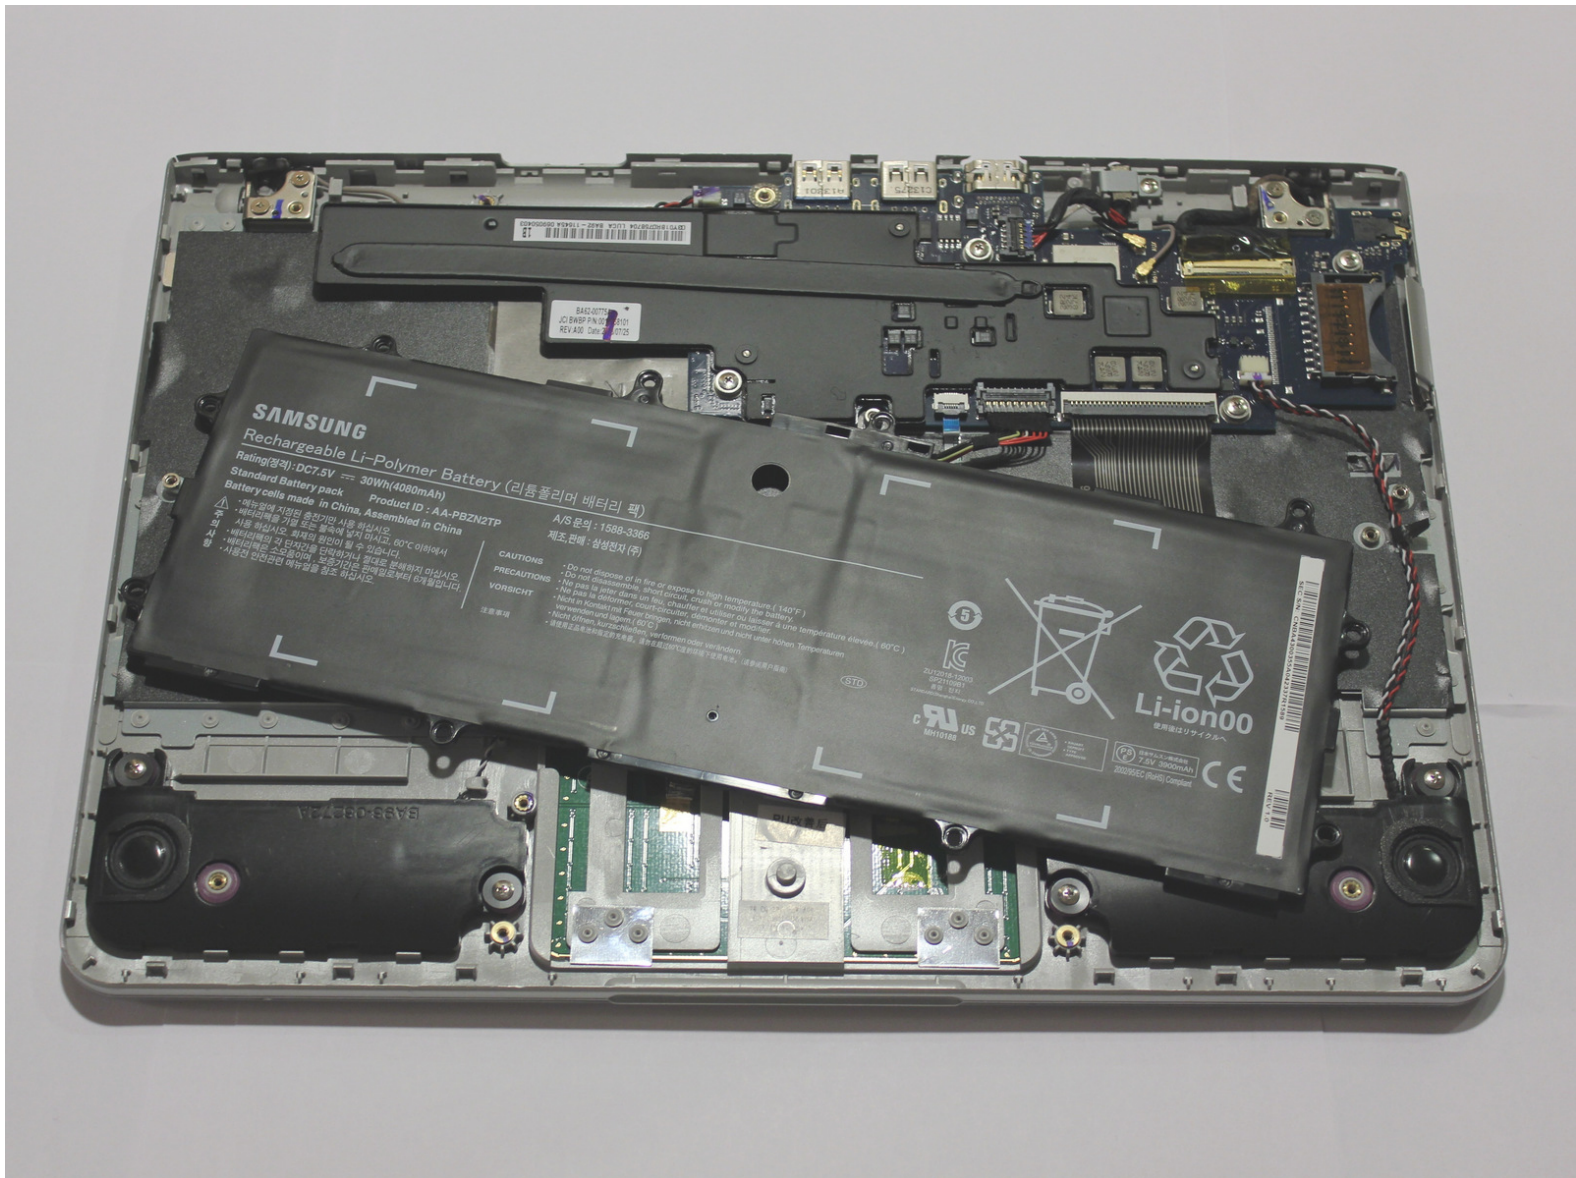

# Samsung Chromebook Series 3 Battery Replacement

Replace a problematic battery in your Samsung Chromebook Series 3.

Written By: Andrey Radchishin



## INTRODUCTION

This guide will help you change the battery in your Chromebook. It requires you to take the Chromebook apart, since the battery is located inside.

---



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Preparing Bottom Cover



- Lay the Chromebook down so that the bottom cover is facing up.
- Remove the rubber feet on the four corners of the Chromebook in order to get to the screws underneath. They are stuck on with an adhesive.

## Step 2 — Unscrewing Bottom Cover

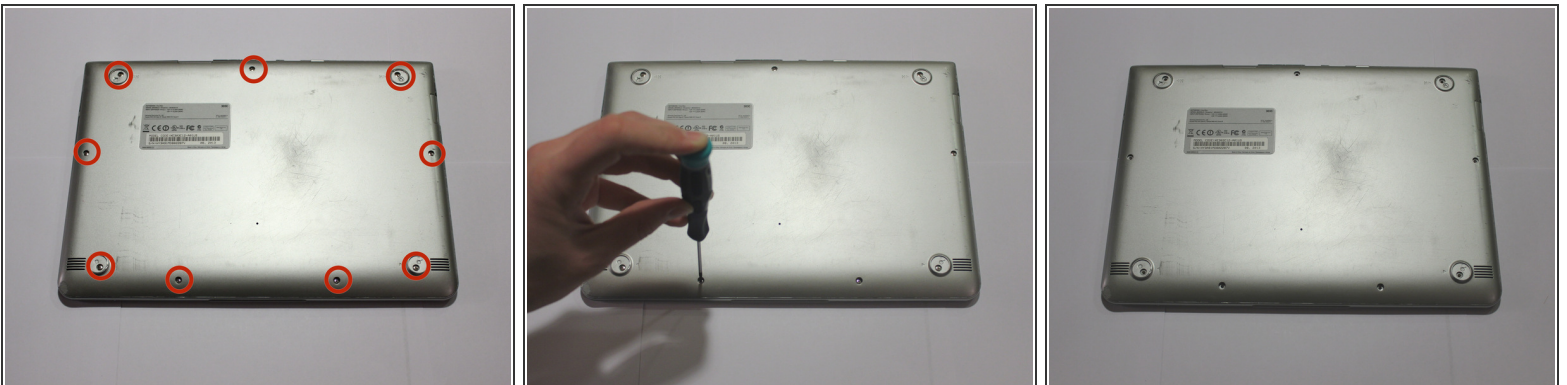

- Remove the nine 4.7 mm screws on the bottom cover using a Phillips #00 screwdriver.



## Step 3 — Removing Back Cover



- Pry up the plastic strip on the back of the Chromebook using a plastic opening tool.




**i** It is not necessary to remove it completely. It just needs to be separated from the bottom cover.

## Step 4






- Pry off the bottom cover using a plastic opening tool.

## Step 5 — Loosening Battery

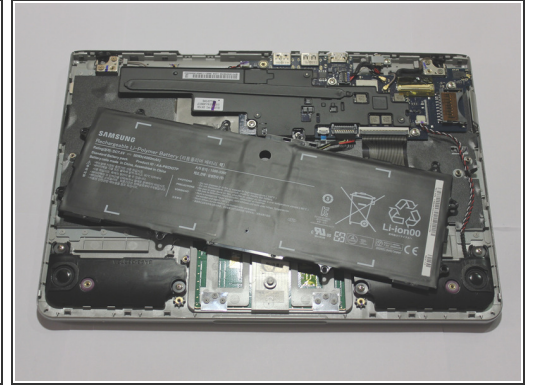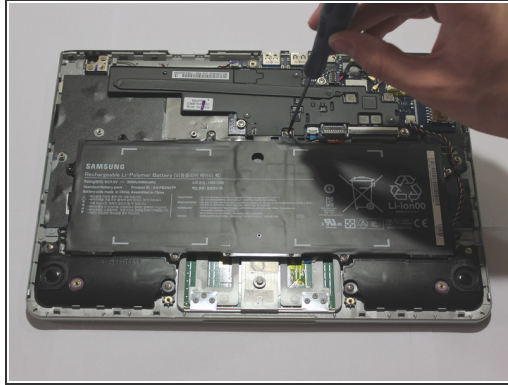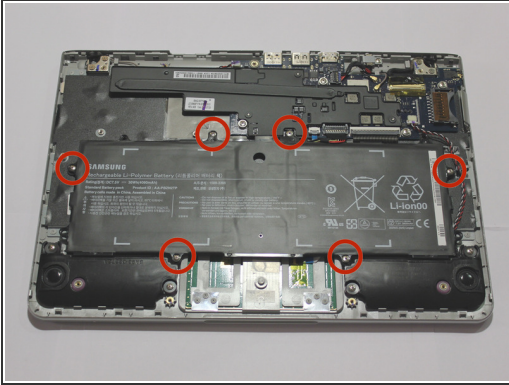

- Remove six 3.5 mm screws holding the battery using a Phillips #00 screwdriver.
- Pull out the battery partway in order to easily get to the battery connector.



## Step 6 — Removing Battery

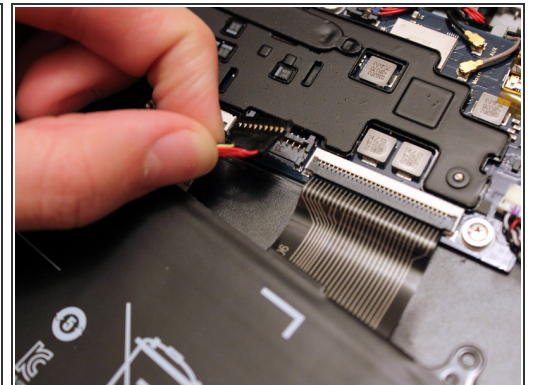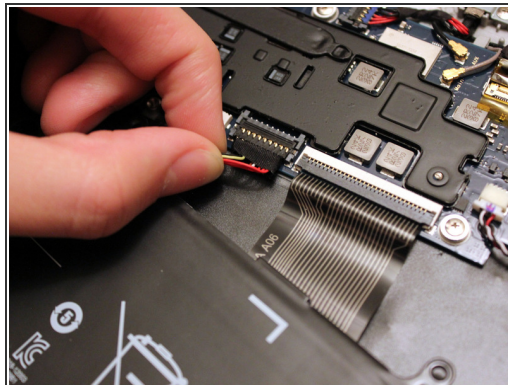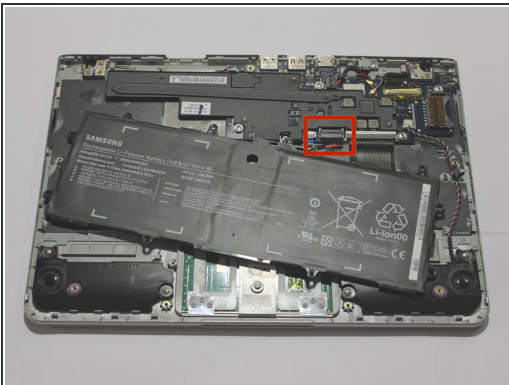

- Disconnect the battery connector by pulling straight up at its base.
- ☑ When reassembling, simply position the connector above it's original place, and push down.



## Step 7

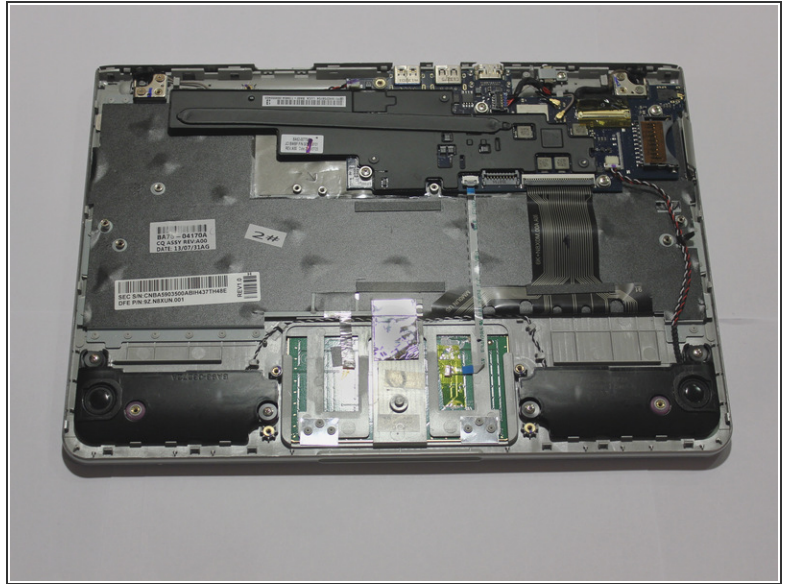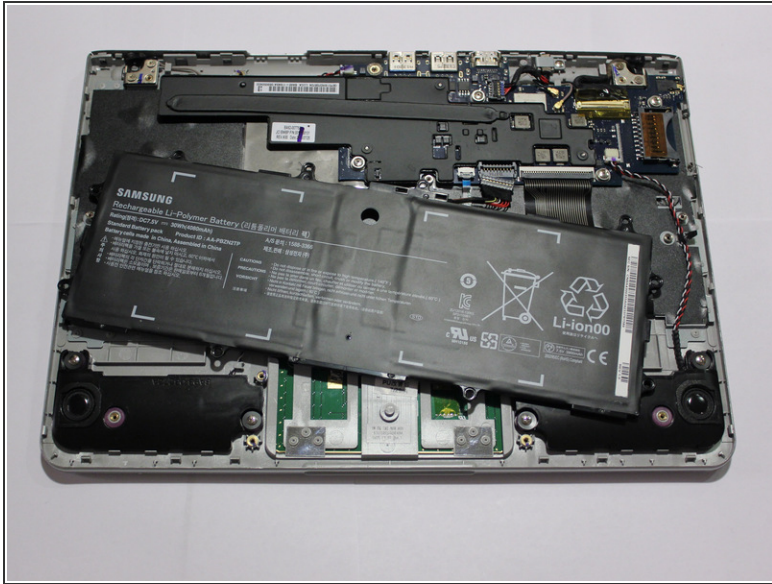

- You can now remove the battery.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-17 11:27:46 AM.